



2-Berth Camper Wagon

Automatic transmission



Batman Bridge, Tamar Valley



Longford Caravan Park, Longford

GENERAL

- Be familiar with advisory stickers on the windscreen.
 - note unsealed road travelling warnings.
 - when driving keep to the left hand side of the road.
 - be aware of your vehicle's clearance height. Take extra care when parking or turning off the main road.

- Tasmania has many mountainous regions. When travelling downhill, choose a lower gear to prevent the likelihood of overheating the brakes.

- To reduce the occurrence of condensation during cooler nights, use the heater in conjunction with leaving a window or vent ajar. Some ventilation is important.

- Tasmania has many nocturnal animals (active at dusk, during the night and dawn). When travelling at night, we recommend travelling at much slower speeds. Wombats and other wildlife can cause a lot of damage (and road-kill is sad).

- During windy conditions we recommend you reduce your speed on all roads as taller vehicles are susceptible to side winds.

- Smoking and pets are not permitted in our vehicles.

- On return of your vehicle, please ensure the interior is in a clean and tidy state, with all used linen placed in the shower or a plastic bag and the dishes, pans etc are washed.

- Familiarise yourself with the vehicle controls and adjust mirrors before setting off.



CAMPING CAR- EXTERNAL

- Use the 'remote' on the key to lock/unlock all doors on the campervan.
- The parking brake is located below the dash to the left side of the foot brake – push with your left foot to engage. To release, pull the lever on the dash (located to the lower/left side of the steering wheel).
- Vehicle height is 2.30 meters
- The fuel door release is located on the driver's door- push to open the fuel door that is located on the passenger side of the campervan. Use only unleaded petrol. (80lt capacity)



CAMPING CAR - INTERNAL

- The GPS unit is stored in the glove box compartment.
- Gain access to the living quarters via either sliding rear door.
- The tool kit and jack are located in the rear compartment under the camping pod at the left. The spare tyre is located under the vehicle. There is a 'flap' in the carpet located about 10cm behind the driver's seat. Lift this flap to sight the access bolt for the spare tyre. Unwind this bolt using the wrench from the tool kit to lower the spare tyre. The RACT should be called to change the tyre if necessary. Phone 1800 428 373.
- The fire extinguisher is located inside near the rear door on the driver's side.
- The interior light switch located next to the ignition needs to be on 'DOOR'.
- To set up the bed, first remove the table top and pole by twisting slightly. Place table outside the vehicle along with your luggage. Unplug the fridge, release the straps and store the fridge on the front passenger seat. Move both front seats forward and also tilt their backrests forward. Remove the rear seat cushions (they are held in place by Velcro). Lift the rear seat upwards to gain access to the sofa bed. Pull the grey leg of the sofa upwards and unfold the sofa bed. Once the bed is set up, store the table and luggage under the bed.

- Plug the fridge into the 12V socket with the 'flip' cover. At night turn the fridge on to low and select cold. It is ok to turn the fridge off overnight as it is enclosed in an insulated cover. This will help preserve the battery life.
- At night sleep with a window slightly ajar for ventilation and use the key 'remote' to lock the vehicle. Turn the ignition and lights off when sleeping.
- For privacy a hatch on top of the rear pod can be swung into place. Before driving fold this hatch flat for better visibility.
- The camping chairs and table are located in the rear under the pod.
- When preparing food or cooking open the main door on the pod to locate all the cooking items, cutlery and utensils.
- The portable gas stove and 4 spare gas refill cartridges are located in the pod.
- To use the cooker, first remove it from the plastic case. Turn the hotplate cover over. Swing open the door on the right of the unit that houses the gas cartridge. Place a cartridge in the unit and ensure the notched 'cutout' on the can is facing to the top. Push the 'lock' lever downwards to engage the gas. Turn the dial to 'max', and ignite the cooker flame by using the piezo ignition, match or lighter. Cook outside and let the cooker cool down before storing away.

WE HOPE
YOU ENJOY
YOUR
HOLIDAY
WITH US.



Hollybank, Underwood



www.autorent.com.au

AutoRent Pty Ltd
Hertz International Sublicensee for Tasmania

PO Box 198
Launceston Tasmania 7250

Phone: 1800 030 234
Fax: (03) 63918744
Email: campervans@autorent.com.au