



Campervans Motorhomes | Rental | Sales



Email  
campervans@autorent.com.au



Phone  
1300 067 222



# THE *Compact* MOTORHOME

This is your complete guide to our 2-Berth Compact Motorhome. Any questions you have may be in this booklet however, if not, please feel free to call our helpline and speak to one of our staff members.

[www.autorent.com.au](http://www.autorent.com.au)

# General Overview

---



## THE *Compact* MOTORHOME

Our compact motorhome is an ideal choice for your next Tasmanian holiday. Suited for 2 adults. Whilst it is considered a compact motorhome compared to the usual larger motorhomes, it has everything you could need with a kitchenette, dining area, an extremely comfortable bed & a shower and toilet!

---

## THINGS TO NOTE

Check the vehicle condition report before leaving the depot.

Be familiar with advisory stickers on windscreen:

- note unsealed road travelling warnings
- when driving, keep to the left hand side of the road
- be aware of your vehicle's clearance height (3.3 metres).

Take extra care when parking or turning off the main road.

Do not park in multi-storey car parks; be careful of awnings, low verandahs, petrol station canopies and tree branches. Do not 'cut' corners too sharply (the top of vehicle leans in as you turn, risking damage).

When travelling downhill, choose a lower gear to prevent the likelihood of overheating the brakes. To reduce the occurrence of condensation during cooler nights, use the heater in conjunction with leaving a window or vent ajar. Some ventilation is important.

Tasmania has many nocturnal animals (active at dusk, during the night and dawn). When travelling at night, we recommend travelling at much slower speeds. Wombats and other wildlife can cause a lot of damage (and road-kill is sad).

During windy conditions we recommend you reduce your speed on all roads as taller vehicles are susceptible to side winds.

Smoking and pets are not permitted in our vehicles.

On return of your vehicle, please ensure the interior is in a clean and tidy state, with all used linen placed in the shower or a plastic bag and the dishes, pans etc are washed.

Familiarise yourself with the vehicle controls and adjust mirrors before setting off.



# INSTRUCTIONS



- Use the remote on the key to lock/unlock all doors on the campervan.
- The vehicle is automatic. Start the engine with your foot on the brake. Make sure the gear shift is in park before starting.
- The vehicle height is 3.3 meters.
- Ensure the vehicle is in 2-wheel drive mode for normal driving. Only use 4-wheel drive when stationary if absolutely necessary to do so.
- Use the round key to unlock the storage cupboard. This should fit roughly 2 medium suitcases.



- The gas bottles are located next to the storage cupboard. There are 2, 3.7 kilo bottles inside. The gas bottles are used for cooking, hot water and ducted heating. The front gas bottle is connected, turn the handle anti-clockwise to turn on, clockwise to turn off. Please ensure the gas bottle is turned off when not in use. The gas bottle towards the rear is a spare gas bottle. Only change over if necessary. To change over, first disconnect the gas bottle. Before disconnecting, please ensure the gas bottle is completely turned off. Un clip the black strap around the bottle, turn the screw on the hose until it detaches. Replace with a full gas bottle.



- The fresh water cap is located next to the gas bottle cupboard. Use the key shown to unlock. Retrieve the fresh water hose from the rear cupboard and fill. Push firmly to lock.
- Please ensure the circuit breaker switches are all in the upwards position.
- To access the 240-volt power, first retrieve the power cable from the rear storage compartment. The inlet is located next to the circuit breaker. Lift the cap, plug in the cord and connect to a 15-amp site power point and switch on the power. This will enable power to all electrical devices and will recharge the motorhomes deep cycle battery pack in about 4-5 hours. We recommend to plug into a powered site every third day however this may vary according to use.

# INSTRUCTIONS



- To use the hot water, first turn on the gas bottle. Remove the hot water cover by pulling on top of the cover whilst applying pressure to the front of the cover with your thumbs. Inside the motorhome, turn on the hot water switch. This can take up to 20 mins to heat up. Please remember to re fit the outside external hot water cover and turn the gas bottle off when not in use.
- At the back of the vehicle, you will find 2 storage doors, the door on the right stores the fresh water and grey water hose and the 15amp power cable. The door on the left holds the fuse panel and solar controllers. The vehicle is fitted with a 290-watt solar panel.

- 
- The grey water hose connects to the outlet and should be placed in the drain at your campsite. Collect the grey water hose from the rear storage and use to empty.
  - The toilet cartridge is located on the passenger's side next to the home door. Ensure the lever on the toilet bowl inside is in the closed position before removing the cartridge. Lift the bottom lever and pull towards you using the handle to remove. Attach to a campervan dump point and unscrew lid, carefully empty the contents. Rinse, add a chemical sachet and about a cup of water. Re install the cap and re insert the cartridge into the motorhome.

- 
- There is a storage hatch located to the left of the home door. This can be used as storage for your outdoor table and chairs if hired.
  - To open the home door, first lift the handle support and rotate. Using the oval key, unlock by turning clockwise. Twist the handle clockwise to open. Latch the door at the back with the attached hook. Remove the ladder by holding it in the center and lift carefully, watching your fingers. Fully extend making sure the straps are firm. Push against the ledge. The flyscreen separates from the home door by turning the latch. To close and lock the door, first fold away the ladder and place back inside the van. Un latch the door from the hook at the back and close the door. Turn the handle anti-clockwise firmly all the way to the arrow. Turn the key anti-clockwise to lock. Lift the support handle and rotate against door.



# INSTRUCTIONS



- The TV can be turned on by the remote control which is located in the cupboard above the control panel. The aerial is in a fixed position.
- To access the shower or toilet, lift up the tabletop and hook to the side of the wall then open the door. Make sure the water pump switch near the sink is turned on.
- For the toilet, make sure you move the grey lever on the front of the bowl towards you to open the cartridge access. Close when not in use.
- To open the window, simply unlatch and push out to open. There is also a blind for privacy and fly screen attached. Slide them out and click into place.



- For the shower, First turn on the hot water service. Make sure the gas bottle is turned on and the outside heat vent cover is removed. Turn on the hot water switch and wait up to 10 minutes for the water to heat. Fully extend out the shower curtain all the way around. Pull out the showerhead from the sink for use. There is also a high bracket wall mount so the showerhead can be placed in a fixed position if required. Put away after use. Make sure you use the bath mat provided to prevent water from splashing out.



- There is a fan above the shower. Wind out the fan completely to open and use the button to turn on. Make sure you close the fan before travelling. There is also a block out blind if needed.
- The water level indicator is located above the sink area. Press and hold down the button to check your water level.
- The control panel is located in the back left corner. At the top you'll find the gas ducted heating, make sure the gas bottle is on before use. Simply push the button to turn on and off. It is thermostatically controlled to run at 20 degrees. Make sure the gas bottle is turned off when not in use. Next is the battery level indicator for the home battery. This will read at 13.7 volts on full charge and 11 volts when it's empty. Underneath you'll find a spare 12-volt socket and the water pump switch.

# INSTRUCTIONS



- The gas detector and fire extinguisher are located to the left inside the door. The smoke alarm is located on the roof near the door. This will sound if the presence of smoke is detected.
- The master switches for the lights are located to the right of the door. However, each light is individually touch sensitive. The lights by the bed have their own switches and USB ports.
- To operate the bed fan, release the latch to swing into position and lock into place. Push the button to power on, pushing the button 3 times will adjust the speed.
- There are storage compartments on either side of the bed, please take care to not lean on these.
- The cupboards at the foot of the bed are great for storage of your personal items. To open, push the black knob until it pops out then rotate to twist the handle and open. This is the same for all drawers and cupboards within the motorhome.



- 
- Pull out the table to use the dinette area. Be careful not to step on this when climbing into the bed.
  - The sun roof in the main living area can be opened by pushing to release the handle. Use the pins to lock into place. There is also a flyscreen and block out screen. Remember to close before travelling.
  - To unlock the fridge, Turn the locking pin at the top. Adjust the temperature according to your needs. We recommend 2-3 on the dial. Please ensure you lock the fridge when travelling by pushing in and rotating the locking pin.
  - To use the hotplates, first have the gas bottle outside turned on. Then, hold down the ignitor switch and turn the required knob to the largest flame. Push the knob inwards at the same time for up to 5 seconds. Make sure you open a window for ventilation.
  - The kettle and toaster are kept in the cupboard above the TV.



2-BERTH CAMPERWAGON			DUAL CAB UTE WITH ROOF TOP TENT		4-BERTH "HI TOP" CAMPERVAN		2-BERTH COMPACT MOTORHOME		PREMIUM MOTORHOME	
VEHICLE DIMENSIONS										
HEIGHT (EXTERNAL)	2300mm (7'5")		3100mm (When Extended)		2550mm (8'4")		3300mm		3100mm	
LENGTH (EXTERNAL)	5130mm (16'8")		5200mm		5000mm (16'3")		5200mm		7300mm	
WIDTH (EXTERNAL)	1985mm (6'5")		1980mm		1690mm (5'5")		1980mm		2470mm	
HEADROOM	1200mm (3'9")				1840mm (6')		1850mm		1950mm	
VEHICLE & DRIVING										
TRANSMISSION	Automatic		Automatic		Automatic		Automatic		Automatic	
ENGINE TYPE	Petrol		Diesel		Petrol		Diesel		Diesel	
FUEL CAPACITY	80 litres		75 litres		70 litres		Approx. 60 litres		110 litres	
DUAL BATTERY SYSTEM	No		Yes		Yes		Yes		Yes	
CHILD RESTRAINT ANCHOR POINTS	No		1		1		No		2	
BIKE RACK	Not Applicable		Not Applicable		Optional Extra \$50 (free with bike hire)		Not Applicable		Included	
MAX SEATING WHEN DRIVING	2		5		4		2		4	
AUDIO	AM/FM/USB		AM/FM/USB		AM/FM/USB		AM/FM/USB		AM/FM/USB	
GPS NAVIGATION SYSTEM	\$7 / Day Hire (\$50 max)		\$7 / Day Hire (\$50 max)		\$7 / Day Hire (\$50 max)		\$7 / Day Hire (\$50 max)		Included	
AIR CONDITIONING	Drivers Cabin		Drivers Cabin		Drivers Cabin		Drivers Cabin		Drivers Cabin & Home	
CRUISE CONTROL	Yes		Yes		Yes		Yes		Yes	
LIVING AREA										
SOLAR PANEL	No		No		Yes		Yes		Yes (200 watt)	
12V & 240V LIGHT & POWER	No		No		Yes		Yes		Yes	
EXTERNAL AWNING	Yes		Yes		Yes		No		Yes	
DINETTE TABLE	Yes		No		Yes		Yes		Yes	
TV/DVD (ALL 12V)	No		No		Yes TV & DVD		Yes TV & DVD		Yes TV & DVD	
HEATING	No		No		Electric Air-flow Heater (240v)		Ducted Gas		Ducted Diesel	
TOILET	No		No		No		Yes		Yes	
SHOWER	No		No		No		Yes		Yes	
LP GAS CAPACITY	930g (2x 465g starter kit)		1x 2kg Bottle		3kg		2 x 4kg		9kg	
DRINKING WATER CAPACITY	Not Applicable		Not Applicable		30 litres		70 litres		103 litres	
GREY WATER CAPACITY	Not Applicable		Not Applicable		Not Applicable		Not Applicable		110 litres	
BED DIMENSIONS	Dinette Coverts to Bed 1800 x 1200mm (5'11" x 3'11")		Bed in Roof Top Tent 1900 x 1400mm		Forward Dinette Converts to Double Bed 1850 x 1440mm (6'1" x 4'8") Bed in Roof • 1900 x 1400mm (6'3" x 4'6") • Can take 2 children under 16 years of age		Bed Above Drivers Cabin 1900 x 1400mm		Electric Roll Down Double Bed 2000 x 1325mm Rear Dinette Convertible to Double Bed 2125 x 1430mm	
OUTDOOR TABLE	Included		Included		Available for Hire at Extra Cost		Available for Hire at Extra Cost		Available for Hire at Extra Cost	
OUTDOOR FOLDING CHAIRS	Included		Included		Available for Hire at Extra Cost		Available for Hire at Extra Cost		Available for Hire at Extra Cost	
BEDDING LINEN & TOWELS	Included in rental, per person (extra cost for extra kits)		Included in rental, per person (extra cost for extra kits)		Included in rental, per person (extra cost for extra kits)		Included in rental, per person (extra cost for extra kits)		Included in rental, per person (extra cost for extra kits)	
KITCHEN FACILITIES										
COOKING	Butane Gas Cooker		3 x Gas Hotplates		LP Gas Cooktop & Griller/Microwave Oven 240v		3 x Gas Hotplates		3 x Gas Hotplates, Oven and Microwave	
ELECTRIC TOASTER (240V)	No		No		Yes (240v)		Yes		Yes	
COLD FOOD & DRINK STORAGE	Portable Fridge (31 litres) 2 way (12v + 240v adaptor)		Portable Fridge		Fridge & Freezer (40 litre fridge) (12v & 240v)		Fridge & Freezer (60 litre fridge)		Fridge & Freezer (150 litre fridge)	
FRY PAN	Yes		Yes		Yes		Yes		Yes	
DISHWASHING	Large Plastic Tub		Large Plastic Tub		Kitchenette Sink		Kitchenette Sink		Kitchenette Sink	



**We hope you enjoy your  
holiday with us!**